


Decals

⚠ DANGER

Make sure all decals are attached to the liftgate and/or truck and are legible at all times.

Safety decals provide a vital role in helping to reduce injuries and/or possibly even death. To ensure the greatest level of safety, all decals must be in place and legible at all times. Remember, it is the users responsibility to maintain these decals. For a complete part number list of the decals used on the Tuckunder liftgates, refer to the Decals section in the Parts manual for AST and ATU Tuckunder Liftgates.

For replacement decals contact:
Anthony Liftgates, Inc.
1037 West Howard Street
Pontiac, Illinois 61764
(815) 842-3383
www.anthonyliftgates.com

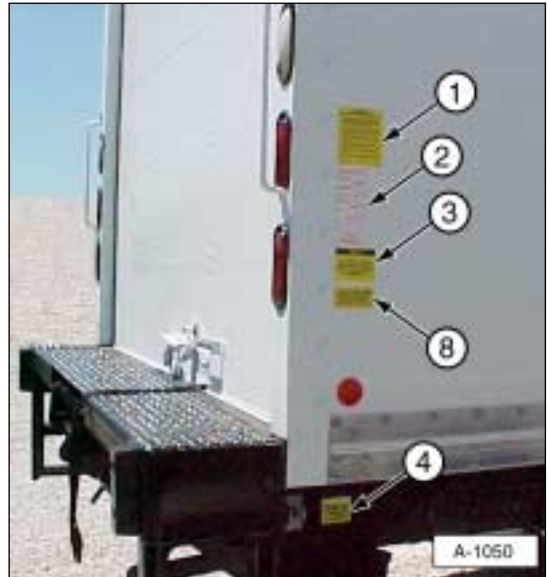

1.

URGENT WARNING
ELEVATING GATE INSTRUCTIONS

Before Operating Lift, Be Sure You Understand the Following.

1. Improper operation of this lift can result in serious personal injury. Do not operate unless you have been properly instructed and have read and are familiar with, the operating instructions. If you do not have a copy of the instructions please obtain them from your employer, distributor, or lessor, as appropriate, before you attempt to operate the lift.
2. Be certain the vehicle is properly and securely braked before using the lift.
3. Always inspect this lift for maintenance or damage before using it. If there are signs of improper maintenance, damage to vital parts, or slippery platform surface, do not use the lift. Do not attempt your own repairs, unless you are specifically trained.
4. Do not overload. See Mfg. Literature and/or Rating Label on the unit for the rated load. Remember that this limit applies to both raising and lowering operations.
5. Each load should be placed in a stable position within the edges of the platform as near as possible to the center of the platform side to side, and as close to the truck sill as possible.
6. Never stand in or move through or allow anyone else to stand in or move through the area in which the lift may operate or into which an upset load might fall.
7. This is not a passenger lift. This liftgate is intended for loading and unloading of cargo only. Do not use this liftgate for anything but its intended use.

Anthony Liftgates, Inc.

6/95


Q-003013

2.

ANTHONY ATU, AST, AK & LB LIFTGATE OPERATING INSTRUCTIONS

1


UNLATCH LIFTGATE BY
TWISTING, THEN SLIDING
“LATCH PIN” IN DIREC-
TION OF ARROW

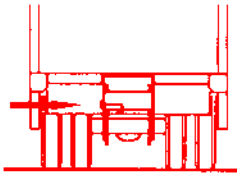

2


LOWER PLATFORM
BY PUSHING CONTROL
SWITCH TO “DOWN”
POSITION

Platform will begin
to open as it lowers.

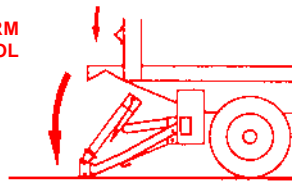


3

UNFOLD PLATFORM BY
PULLING PLATFORM HAN-
DLE OUTWARD AND
TOWARD GROUND.

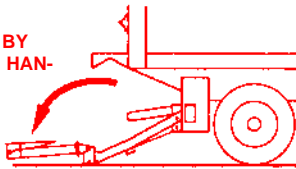

4

UNFOLD FLIP SECTION.

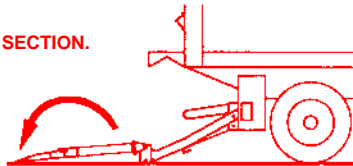

5

FLIP SWITCH “UP” TO RAISE PLATFORM
-OR-
FLIP SWITCH “DOWN” TO LOWER PLAT-
FORM



6

TO TUCK UNIT UNDER AFTER USE, LOWER PLATFORM
TO GROUND AND REVERSE STEPS



ANTHONY LIFTGATES, INC.

1037 WEST HOWARD ST., PONTIAC, IL 61764

ATU-423

3.

NOTICE

THIS LIFTGATE IS PROTECTED WITH AN ELECTRICAL OVERLOAD CIRCUIT BREAKER, LOCATED NEAR THE POWER SUPPLY.

A-150238

4.

**1500 lb.
MAXIMUM
CAPACITY**

A-131015

IMPORTANT NOTICE

Make sure the proper "maximum capacity" decal goes on the appropriate liftgate. For example, the "1500 maximum capacity" decal goes on AST1500 models only. Do not put a higher rated decal (3000 pound) on a smaller liftgate (model 1500); this could result in liftgate damage or possibly personal injury.

5.

STAND CLEAR

**DO NOT RIDE
ON LIFT**

ATU-146

6.



7.

Note:

**Disengage “latch”
before attempting to
use liftgate.**

**Engage “latch” after
using liftgate.**

A-131017

8.

**AFTER USING LIFTGATE, SECURE
LATCH AND, IF EQUIPPED WITH
POWER CUT-OFF SWITCH, TURN
OFF POWER TO PREVENT UNAU-
THORIZED USE OF LIFTGATE**

ATU-141

9.



This decal is attached, at the factory, to the power cable/fuse assembly.