


# INTERLIFT

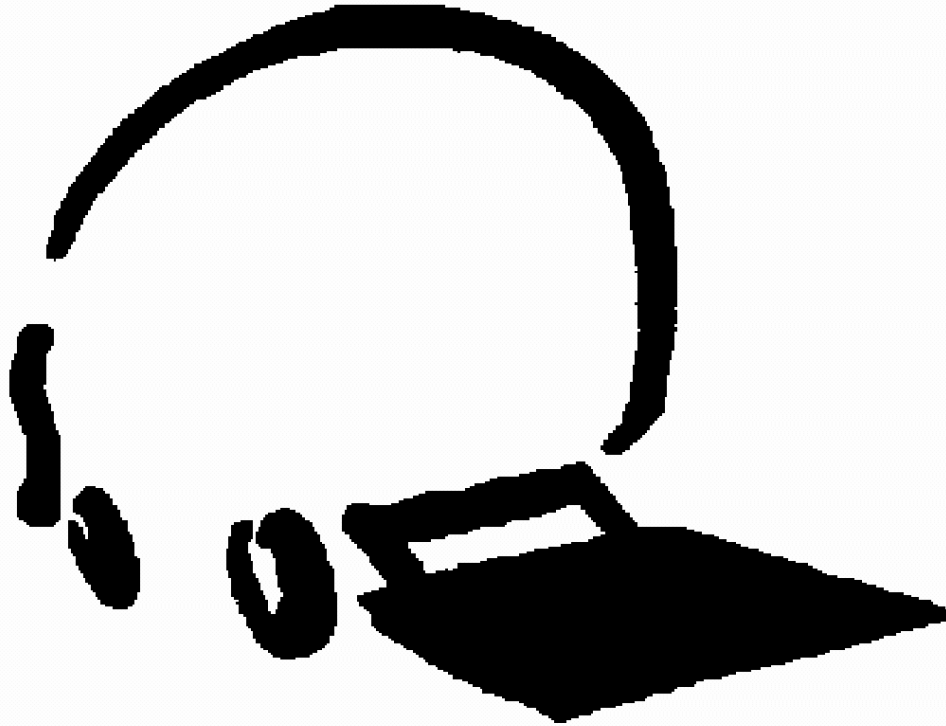

## ILM PARTS MANUAL

**INTERLIFT, INC. a member of MBB**

---

15939 Piuma Ave., Cerritos, CA 90703 Tel (562) 924-8218 Fax (562) 924-8318  
Visit our website at [www.interlift.net](http://www.interlift.net) for information on additional product lines  
If you received this product with damaged or missing parts, contact Interlift at 562-924-8318

7/30/2003

## Introduction

Each Interlift liftgate is manufactured to stringent quality standards for years of reliable service. To ensure maximum performance of your Interlift liftgate, always specify and use “OEM Parts” from Interlift.

This manual is a complete parts listing for ILM liftgates from 1200 lb. to 3000 lb. capacity. We have provided charts and diagrams to make the selection of the correct part as easy as possible.

This manual does not provide procedures for the servicing and repair of an Interlift liftgate. Service and repair should only be performed by an authorized Interlift distributor. For information on the nearest authorized Interlift distributor contact:

**INTERLIFT, INC. a member of MBB.**

15939 Piuma Ave  
Cerritos, CA 90703  
Tel (562) 924-8218  
Fax (562) 924-8318

[www.Interliftlift.net](http://www.Interliftlift.net)

*\* The use of non-standard or makeshift parts can be extremely hazardous and result in serious injury or death.*

**Table of Contents**

Introduction.....2

General Information.....4

Ordering Information.....5

Key Components.....6

H-Frame - Above Floor (AF).....7

H-Frame - Standard.....8

Internal H-Frame Components (Including Above Floor) .....9

Platform .....10

Electrical Components.....11

Slider Assembly.....12

Cylinder Assembly.....13

Hydraulic Power Unit Assembly.....14

Light Option .....15

Power Close Option.....16

Decals.....17

Help and Service .....18

**General Information**

**MODEL NUMBER CODING**

The code and model numbers of a liftgate are references to its size, type and capacity. Using these numbers when ordering or specifying improves customer satisfaction and delivery.

Model Number: **ILM209436AF**

<u>ILM</u>	<u>20</u>	<u>94</u>	<u>36</u>	<u>AF</u>
1	2	3	4	5

**1. LIFTGATE TYPE**

**ILM** = Medium Duty Liftgate

**2. WEIGHT CAPACITY**

12 = 1250 lb. capacity

16 = 1600 lb. capacity

**20** = 2000 lb. capacity

30 = 3000 lb. capacity

**3. WIDTH OF LIFTGATE FROM OUTSIDE OF LEFT RAIL TO OUTSIDE OF RIGHT RAIL**

78 = 78" overall width

**94** = 94" overall width

**4. DEPTH OF PLATFORM** (not including ramp)

30 = 30" of platform loading area

**36** = 36" of platform loading area

42 = 42" of platform loading area

48 = 48" of platform loading area

54 = 54" of platform loading area

60 = 60" of platform loading area

**5. STANDARD FLOOR HEIGHT UP TO 56" OR ABOVE THE FLOOR LIFT UP TO 56"\***

A = Aluminum Platform

**AF** = Above Floor

AFA = Above Floor Aluminum Platform

Blank = Standard liftgate

\*ILM12 STANDARD FLOOR HEIGHT UP TO 46" OR ABOVE THE FLOOR LIFT UP TO 56"