





Decals

Safety decals provide a vital role in helping to reduce injuries and/or possibly even death. To ensure the greatest level of safety, all decals must be in place and legible at all times. Remember, it is the users responsibility to maintain these decals. For a complete part number list of the decals used on the Tuckunder liftgates, refer to the Decals section in the Parts manual for MTU-GLR Model Tuckunder Liftgates, form number MTU-GLR P-11/04.

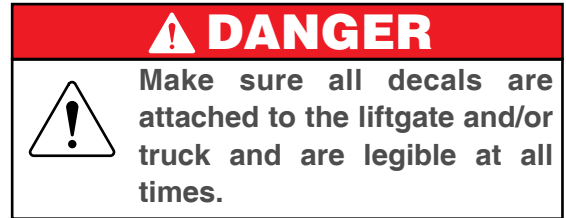

For replacement decals contact:
Anthony Liftgates, Inc.
1037 West Howard Street
Pontiac, Illinois 61764
(815) 842-3383
www.anthonyliftgates.com

MTU Tuckunder Liftgate Safety Decals				
Item	Part No.	Description	Qty	Remarks
1	Q-003013	Urgent Warning - Elevating Gate Instructions...	1	On side of truck body.
2	ATU-423	Operating Instructions	1	On side of truck body.
3	A-150238	Notice - This liftgate is protected...	1	On side of truck body.
4	ATU-141	After Using Liftgate, Secure Latch...	1	On side of truck body.
5	ATU-147	3000 lb. Maximum Capacity	1	On side of truck body on 3000 Models Only.
	A-171433	4000 lb. Maximum Capacity	1	On side of truck body on 4000 Models Only.
6	A-131034	Anthony Hydraulic Lift Gate label	1	On back of liftgate.
7	A-150601	Flag — Made in the USA	1	Inside edge of platform.
8	A-131003	SF Series	1	Inside edge of platform.
9	A-131026	Zero Leak Concept	1	Inside edge of platform.
10	A-131017	Note: Disengage "latch"...	1	On bottom of main platform.
11	ATU-146	Stand Clear Do Not Ride on Lift	2	On bottom of main platform and on bottom of flip-over section.
12	ATU-424	Reset Circuit Breaker (not shown)	1	On circuit breaker bracket.
13	ATU-143	Secure Latch While in Transit (not shown)	1	Place by latch assembly.

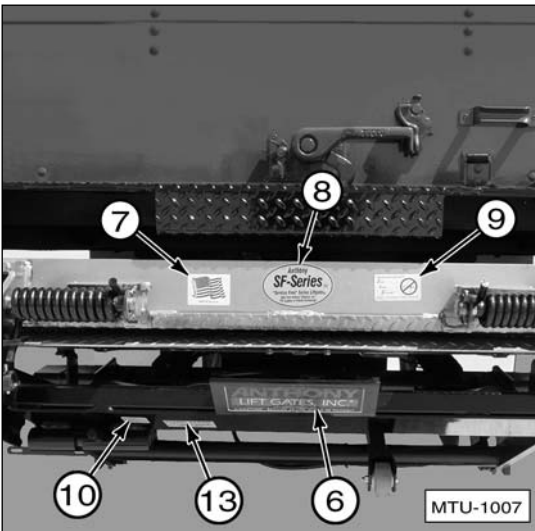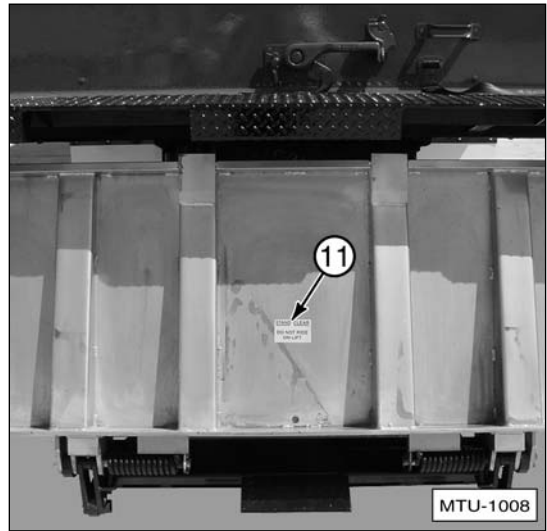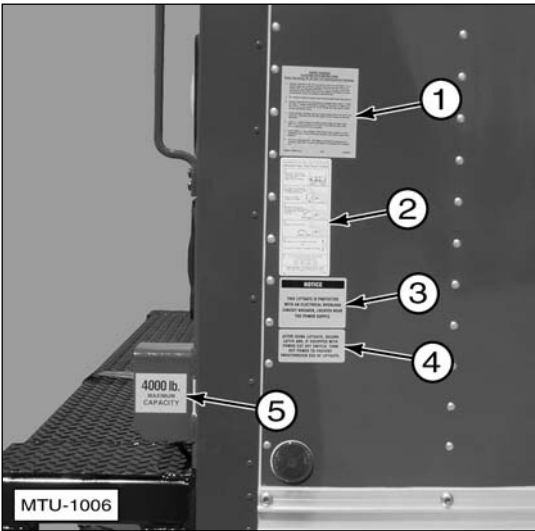

1. Q-003013

URGENT WARNING **ELEVATING GATE INSTRUCTIONS** **Before Operating Lift, Be Sure You Understand the Following.**

1. Improper operation of this lift can result in serious personal injury. Do not operate unless you have been properly instructed and have read and are familiar with, the operating instructions. If you do not have a copy of the instructions please obtain them from your employer, distributor, or lessor, as appropriate, before you attempt to operate the lift.
2. Be certain the vehicle is properly and securely braked before using the lift.
3. Always inspect this lift for maintenance or damage before using it. If there are signs of improper maintenance, damage to vital parts, or slippery platform surface, do not use the lift. Do not attempt your own repairs, unless you are specifically trained.
4. Do not overload. See Mfg. Literature and/or Rating Label on the unit for the rated load. Remember that this limit applies to both raising and lowering operations.
5. Each load should be placed in a stable position within the edges of the platform as near as possible to the center of the platform side to side, and as close to the truck sill as possible.
6. Never stand in or move through or allow anyone else to stand in or move through the area in which the lift may operate or into which an upset load might fall.
7. This is not a passenger lift. This liftgate is intended for loading and unloading of cargo only. Do not use this liftgate for anything but its intended use.

Anthony Liftgate, Inc.


6/95

Q-003013

2. ATU-423


**ANTHONY ATU, AST, ASTL, MTU, & LB LIFTGATE
OPERATING INSTRUCTIONS**

1
UNLATCH LIFTGATE BY
TWISTING, THEN SLIDING
"LATCH PIN" IN
DIRECTION OF ARROW.

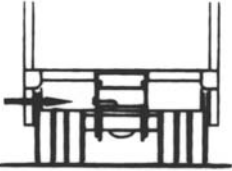


2 LOWER PLATFORM BY
PUSHING CONTROL SWITCH
TO "DOWN" POSITION.


Platform will begin
to open as it lowers.

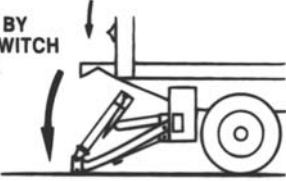


3
UNFOLD PLATFORM BY
PULLING PLATFORM HANDLE
OUTWARD AND TOWARD
GROUND.

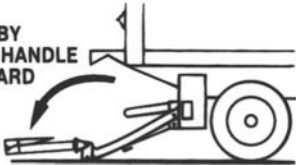

4
UNFOLD "FLIP" SECTION.

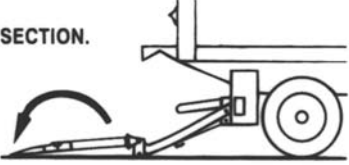

5
FLIP SWITCH "UP" TO RAISE PLATFORM
-OR-
FLIP SWITCH "DOWN" TO LOWER PLATFORM



6 TO TUCK UNIT UNDER AFTER USE, LOWER PLATFORM
TO GROUND AND REVERSE STEPS

1 **2** **3** **4**

ANTHONY LIFTGATES, INC.
1037 WEST HOWARD ST. PONTIAC, IL 61764
ATU-423

3. A-150238

NOTICE

**THIS LIFTGATE IS PROTECTED
WITH AN ELECTRICAL OVERLOAD
CIRCUIT BREAKER, LOCATED NEAR
THE POWER SUPPLY.**

4. ATU-141

**AFTER USING LIFTGATE, SECURE
LATCH AND, IF EQUIPPED WITH
POWER CUT OFF SWITCH, TURN
OFF POWER TO PREVENT
UNAUTHORIZED USE OF LIFTGATE.**

5. ATU-147

**3000 lb.
MAXIMUM
CAPACITY**

A-171433




IMPORTANT NOTICE

Make sure the proper "maximum capacity" decal goes on the appropriate liftgate. For example, "3000 lb. Maximum Capacity" decal goes on MTU-GLR 3000 models only. Do not put a higher rated decal (4000 pound) on a smaller liftgate; this could result in liftgate damage or possibly personal injury.

8. A-131003



9. A-131026

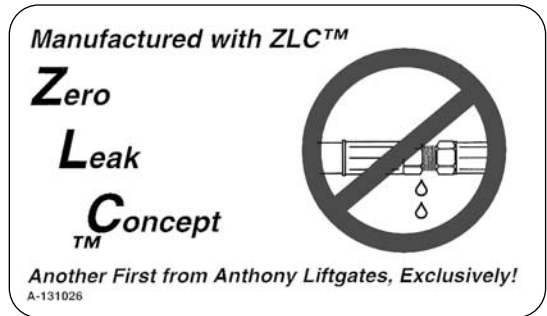


6. A-131034




7. A-150601



10. A-131017

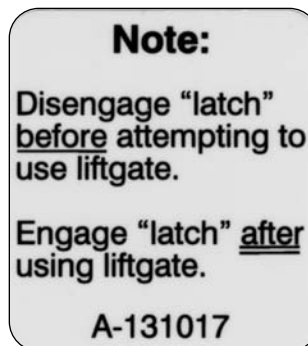

11. ATU-146

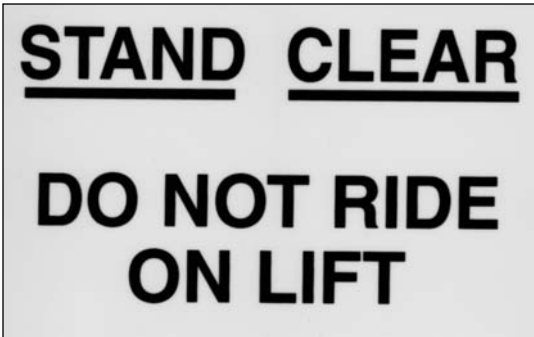

12. ATU-424 (located on circuit breaker)



13. ATU-143

