



Bottom Rails


Part 1003- Morgan Bottom Rail GVFD & GVSD

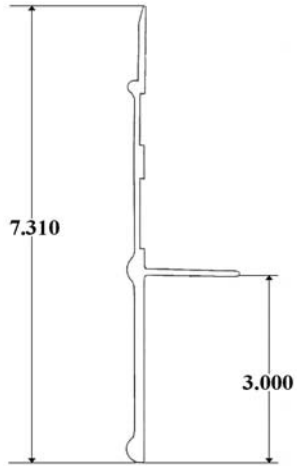


Part 1005- Morgan Bottom Rail GVFD
New Style

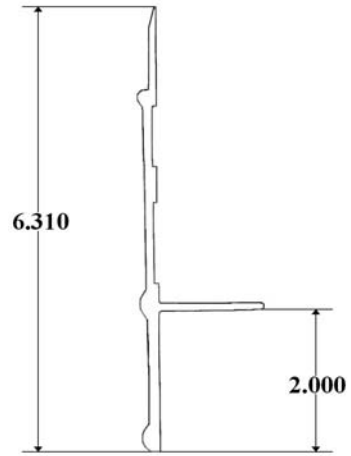


Part 1008F- Morgan Bottom Rail GVFD
From 97 to Present

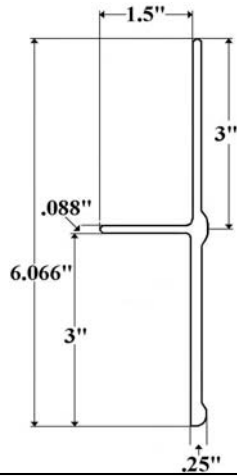

Part 2003- Supreme Bottom Rail

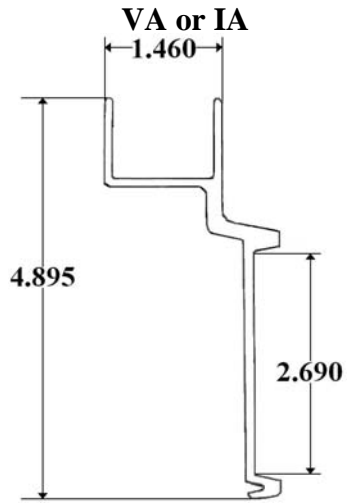


Part 2003F- Supreme Bottom Rail

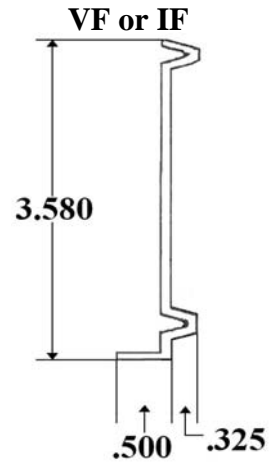


Also Replacement for Duralite


Part 2004F- Supreme Bottom Rail

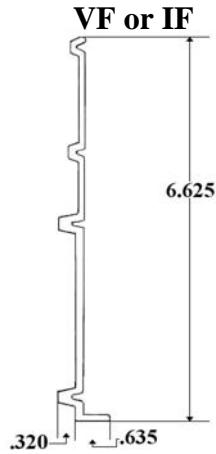

Also Replacement for Modern Wagon




Part 3003- Utilimaster Bottom Rail

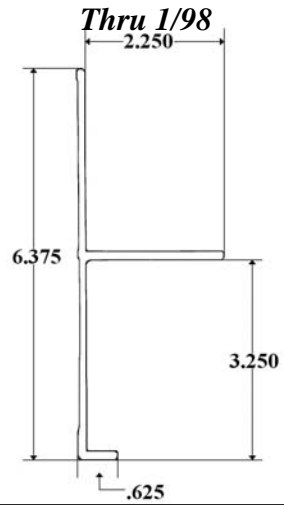


Part 3004- Utilimaster Bottom Rail

From 2/98

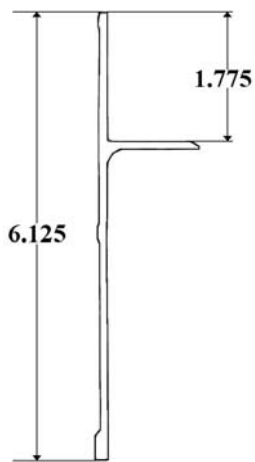

Part 3005- Utilimaster Bottom Rail

New Style

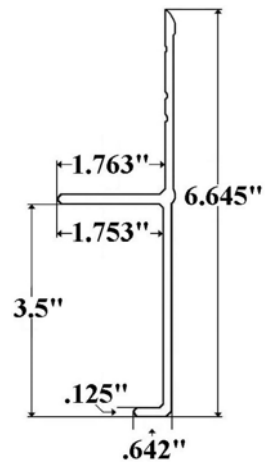


Part 305-2- Bottom Rail U.S. Truck




See Casting #322-5


Part 307-2- Bottom Rail U.S. Truck

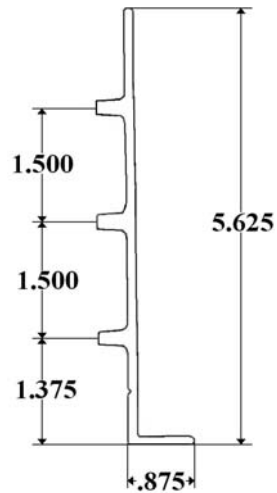

Part 4003- Bottom Rail Grumman

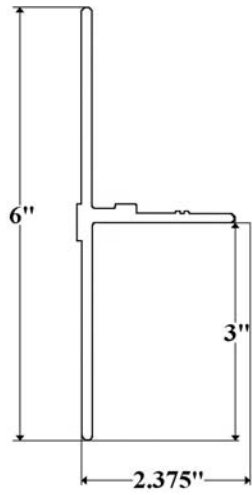


Part 5003- Bottom Rail Kidron

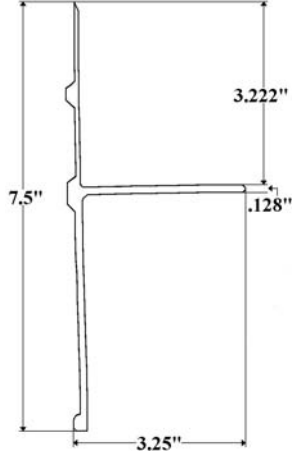


Will Replace Delta FZ, Gindy & Vanco


Part 6003- Bottom Rail Mickey

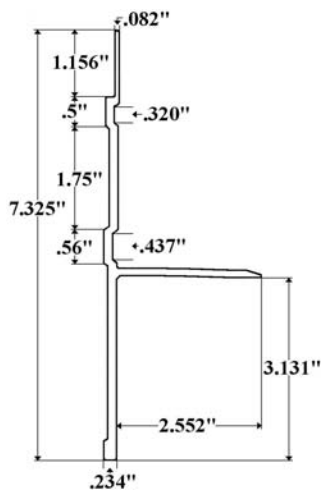


Part 7003- A. M. Haire Bottom Rail

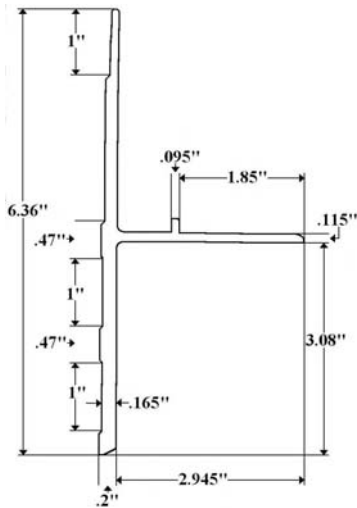


Part 7703- ABC Body Bottom Rail

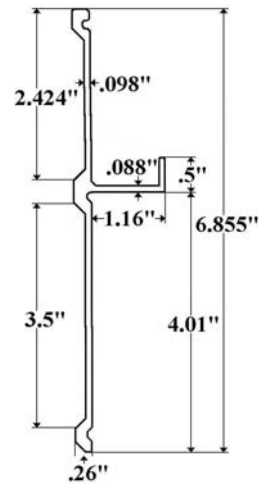


Part 8003- Bottom Rail A/C

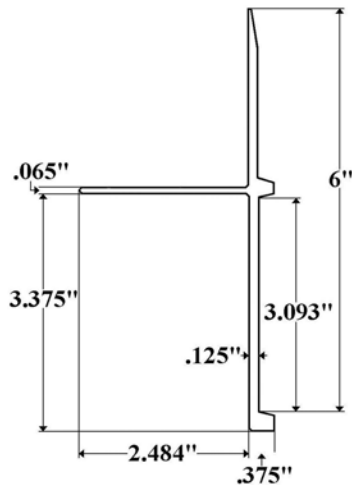

Part 9003- Babb Bottom Rail New Style

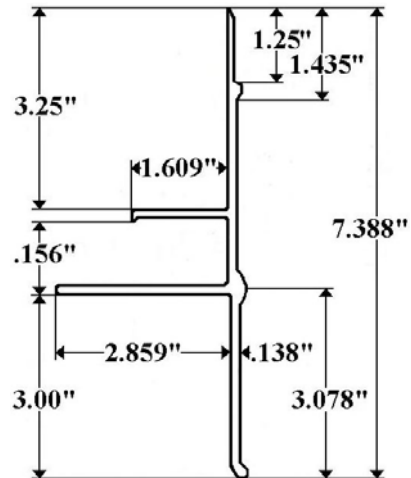

Part 9903F- Marathon/Satellite/Metro Bottom Rail

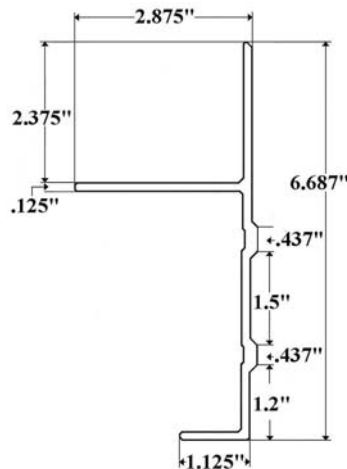

Part TRVBOT- Bottom Rail Babb, Trail-R-Van, Delta QX

